

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For external model users: Please use the external shielded SCSI cables supplied with this CD-ROM drive. Using other signal cables may exceed the limits of the Class B Part 15 of the FCC Rules.

Any changes or modifications should be approved by the party responsible for compliance with FCC Rules; otherwise, the user loses authority to operate the equipment.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

The laser beam emitted from the optical pickup is invisible. Accordingly:

- **Do not open the optical pickup housing.**
- **Obtain service only from Plextor-authorized personnel.**

CAUTION

To disconnect the CD-ROM drive from an electrical current, pull out the power plug.

VORSICHT

DIE TRENNUNG VOM NETZ ERFOLGT DURCH ZIEHEN DES NETZSECKES.

Zur Einhaltung der Funk-Entstörung von nicht selbständig betreibbaren Hochfrequenzgeräten (periphere Anlagenkomponenten).

Dieses Gerät entspricht als Einzelgerät den Funk-Entstöranforderungen der Postverfügung Nr. 243/1991. Wird das Gerät innerhalb einer Anlage zusammen mit anderen Geräten betrieben. So muß bei Inanspruchnahme der "Allgemeinen (Betriebs-) genehmigung" nach der BMPT-AmtsblVfg Nr. 243/1991 die gesamte Anlage folgenden Richtlinien entsprechen:



 
ÜG-Vfg.243

- Grenzwertklases B der EN55022
- Auflagen nach § 2 der BMPT-AmtsblVfg 243/1991

Dies ist bei der Zusammensetzung einer Anlage (z.B. Computersystem) aus nur einzeln geprüften Geräten nicht immer erfüllt.

Inside front cover

CD-ROM DRIVE



Caddy

PX-32CSi Internal
PX-32CSe External

Tray

PX-32TSi Internal
PX-32TSe External



Plextor reserves the right to make improvements in the products described in this manual at any time without prior notice.

Plextor makes no representation or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Plextor Corp. reserves the right to revise this manual and to make changes in its content without obligation to notify any person or organization of such revision or change.

This manual is copyrighted, all rights reserved. It may not be copied, photocopied, translated, or reduced to any electronic medium or machine-readable form without Plextor's prior permission.

Manual copyright © 1997 Plextor Corp. November 1997.

Licenses and Trademarks

All licenses and trademarks are property of their respective owners.

Table of Contents

1. Introduction	1
2. Box Contents	3
UltraPleX Internal Drives	4
UltraPleX External Drives	5
A Gentle Reminder	6
3. What Else Do I Need?	7
4. Precautions	9
5. Drive Features	10
PX-32XS Front Panel (Internal and External)	
Caddy Drive	10
Tray Drive	11
PX-32XSi (Internal Drive)	
Rear Panel (Caddy, Tray)	12
PX-32XSe (External Drive)	
Rear Panel (Caddy, Tray)	13
6. Drive Switch/Jumper/Dial Settings	14
PX-32XSi Internal Drive	15
PX-32XSe External Drive	17
Other Switch/Jumper Settings—UltraPleX	18
7. Termination	19
PX-32XSi Internal Termination	20
PX-32XSe External Termination	20
8. Hardware Installation	21
Board Installation	22
Drive Positioning	25
Mounting an Internal Drive	26
External Drive Installation	30
Soundboard Installation	33
Audio Cables	34

9. Software Installation	36
OS/2	37
Windows NT 4.0 (and Below)	38
10. Using CD-ROM Discs, Caddies, and Trays	40
Caddy Loading	40
Inserting the Disc into a Caddy	40
Loading the Caddy into the Drive	42
Removing the Caddy from the Drive	42
Tray Loading and Operation	42
Cleaning the Disc	43
11. How to Play Audio CDs on Your Drive	44
12. Troubleshooting	46
Guidelines	46
12.1 PC Compatibles: Initial Installations	48
12.2 PC Compatibles: Existing Installations	54
12.3 Apple Macintosh	59
13. Contacting Plextor's Technical Support Department	60
How to Contact	61
Before You E-mail/Log On/FAX/Call	61
Returns	62
Helpful Contacts	62
14. Specifications	63
Appendix: Windows 95 Drivers and Installation Guide	65
About Plextor	79
Warranty Information	inside back cover

Introduction

Thank you for purchasing Plextor's UltraPleX, a 14/32 speed CAV CD-ROM drive meant for the professional and power user. The UltraPleX is the most reliable and highest performance CAV CD-ROM drive available in its class. The UltraPleX is also the first fully CAV CD-ROM drive manufactured by Plextor. The throughput of CAV CD-ROM drives varies throughout the disc. With the UltraPleX you are guaranteed a minimum of fourteen speed performance and will experience thirty-two speed performance with certain CD-ROM discs and applications.

Throughout the rest of this manual we will use the model numbers when necessary to distinguish between internal and external drives. A lower case "i" or lower case "e" is used at the end of the model number to indicate internal or external unit. When the topic applies to both the caddy and tray versions of the drive we will use an "X" to replace the "C" and the "T" (PX-32XSi/PX-32XSe). In the case that the topic applies to both internal and external, caddy and tray, we may use "UltraPleX" to refer to all drives.


We appreciate the confidence you have shown in us. Our goal is to put you—and keep you—on the leading edge of CD-ROM drive performance. To get you there, we first have to help you install your UltraPleX drive properly and operate it correctly. After that the responsibility is yours to discover the applications that make a CD-ROM drive such a powerful and exciting addition to your system.

For those of you with PCs, the installation process may seem a bit complicated. Windows 95 has improved things a little bit. Mac people have it easy. But no one should worry. Our manuals have successfully walked many thousands of customers through the installation process, including those who previously had lived in mortal terror of the innards of their computers. Plus, our Technical Support Department is just an e-mail message or phone call away.

This manual is designed to be followed in sequence. It is aimed primarily at those who will connect their UltraPleX drive to a PC.

Mac users should look for this symbol:



Users of UNIX-based systems should look for this symbol:  as an indicator of sections of the manual that pertain to them.

Many of you reading this manual are experienced computer users who have successfully installed peripherals in the past. There probably are a number of sections in this manual that you can skip over. However, we ask everyone—from novice computer users to experienced computer professionals—to read the sections marked with this symbol:



CHAPTER 1 -- Introduction

In this manual you should find all the information you need to successfully install and operate your drive. If you run into a problem, however, please contact us (see Chapter 13 for the different ways you can contact us). You will be connected to our friendly, helpful band of tech support reps **who know their stuff**. What might seem like a non-cooperative CD-ROM drive to you could very well be a 30-second fix to them. But we will never know unless you CONTACT US. If you are having trouble, please don't give up, and don't take your drive back to where you bought it until you have spoken with one of our tech support reps.



Box Contents

YOUR TASK: Check the contents of the box.

YOUR OBJECTIVE: Make sure you've got everything you paid for.

YOUR METHOD: Compare what you find in the box with the tables on the following pages.

What you should find in your Plextor box depends on two factors: 1) what configuration you purchased; and 2) what the company that sold you the box put in—or took out—while it was in their possession.

Plextor currently sells its UltraPleX drives in three configurations:

- 1) Drive Only
- 2) Drive with SCSI Interface Kit
- 3) Drive with Mac Kit

The configuration you received is indicated by stickers applied to your box.

Your drive may also have been integrated into a computer system or subsystem sold by a third party.

PLEASE NOTE: A security sticker was applied to the top of your box. The contents of your box were carefully checked before this sticker was applied. If it was cut before you purchased the box, you should carefully check the contents to ensure nothing has been removed. If something is missing, you should contact the party from whom you purchased the box for an explanation.




 



There may be a perfectly good reason why the security sticker on the box was cut before you received it. For example, a dealer may have purchased a "Drive Only" configuration from Plextor, then added a SCSI interface board and/or software he had purchased separately before selling the box to you.

NOTE: If your drive came pre-installed in a computer, the rails, cables, interface boards, software, and other parts shown on the following pages may have been installed and may not be separately available.

 

 
Use the following tables to check the contents of your box:

UltraPlex Internal Drives

	DRIVE ONLY	DRIVE w/ SCSI Interface
CD-ROM drive  (Caddy)  (Tray)	X	X
4 chrome and 4 black screws	X	X
Caddy (PX-32CS only) 	X	X
Plextor Manager software	X	X
SCSI interface board & installation guide*		X
Audio cable*		X (2)
SCSI cable* 		X
Plextor operation manual	X	X
Warranty registration card	X	X
Extra jumpers for setting drive switches 	X	X

* Please see Chapter 13, page 62, for locations to purchase additional or replacement accessories.

UltraPleX External Drives

	DRIVE ONLY	DRIVE w/ SCSI Interface	DRIVE w/ Mac Kit
CD-ROM drive <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">(Caddy)</div> <div style="text-align: center;">X</div> <div style="text-align: center;">X</div> <div style="text-align: center;">X</div> </div> <div style="display: flex; justify-content: space-around; align-items: center; margin-top: 10px;"> <div style="text-align: center;">(Tray)</div>  </div>			
Caddy (PX-32CS only) 	X	X	X
Plextor Manager software	X	X	
SCSI interface board & installation guide*		X	
Audio cable*		X	X
SCSI cable* 		X	X
Plextor operation manual	X	X	X
Warranty registration card	X	X	X
Mac device drivers manual & disk			X

* Please see Chapter 13, page 62, for locations to purchase additional or replacement accessories.



A Gentle Reminder. . .

- YOUR TASK:** Save your box (if you received one).
- YOUR OBJECTIVE:** Have a secure container in which to ship your drive back to Plextor, if necessary.
- YOUR METHOD:** Find an empty space in your home/office and fill it with the Plextor box.
-

If you received your UltraPleX CD-ROM drive in a Plextor box, you should save the box after you have installed your drive. There are many sets of hands—some of them potentially unfriendly—that a drive might go through on its way from us to you. Our box and its packaging material were designed and drop-tested to ensure that your UltraPleX drive can endure rough treatment and still arrive in working order.



We advise you to hold on to your box in case you should ever need to return your drive to Plextor for any reason. Unfortunately, some of our customers have not held on to their boxes and have had to resort to some less-than-secure methods to get drives back to us. We have received drives in a shoebox, in an unpadded express mail envelope, and in a box filled with buttered popcorn.

We cannot assume liability for any damage your drive sustains during shipment. Therefore, please ship your drive in the safest manner possible. We believe your drive will be most secure if it is shipped in a Plextor box. We hope you will never have to ship your drive back to us. If you do, however, please send it packaged in a Plextor box.

If you did not receive a Plextor box (if, for example, your drive came pre-installed in a computer), we recommend that you pay a packaging store (e.g., Mail Boxes Etc.) in your area to ship your drive. The drives that we have received from most packaging stores have arrived in good shape. If you don't have a packaging store in your area, call our Technical Support Department for packaging pointers before you ship your drive. In fact, you should call our Technical Support Department to get an RMA number before returning any drive (see Chapter 13, p. 62).



What Else Do I Need?

YOUR TASK: Review the software and hardware installed in your current computer system.

YOUR OBJECTIVE: Determine what else you may need to operate your CD-ROM drive.

YOUR METHOD: Inventory your current computer system; check list below.



If you are a PC owner and you purchased a Plextor box labeled "Drive with SCSI Interface Kit," your needs are simple: none. The same holds true if you are a Mac owner and purchased a Plextor box labeled "Drive with Mac Kit." Everything you need to successfully install and operate your UltraPleX CD-ROM drive is included in the box you purchased. The only thing you need to add is a CD-ROM disc to play in your new drive.

If you are a PC owner who has purchased an UltraPleX "Drive Only" box, life gets a bit more complicated. You fall into one of three groups:

1) You do not own a SCSI interface board.

In this case, you have to get one. Your local computer store and numerous mail-order vendors carry them.* Call us if you need suggestions on which model to buy. We recommend you get a SCSI interface capable of Ultra SCSI speeds.

2) You own a SCSI interface board.


If you have only one other internal SCSI peripheral device and a Plextor internal CD-ROM drive, check to see if you can use the SCSI ribbon cable in your PC. If the cable has unused connectors, use one to attach the UltraPleX. If the cable in your PC does not have free connector, you will need to purchase a SCSI ribbon cable from your local computer supply store.* The cable must have at least as many connectors as you have internal SCSI peripherals (including one for your Plextor CD-ROM drive), plus one additional connector to attach to the interface board.

If you have an external Plextor CD-ROM drive, you will be able to include it in your daisy chain of other external SCSI peripherals with a SCSI cable. Be sure the cable you choose has at least one 50-pin, high-density SCSI

* Please see Chapter 13, page 62, for locations to purchase additional or replacement accessories.

connector for connection to the UltraPleX. Be sure to read the section on “Termination” in Chapter 7 of this manual.

If you purchased your SCSI interface board several months or years before you purchased your UltraPleX drive, you may need to update your device drivers. See the discussion about device drivers in Chapter 9 of this manual.

NOTE:  When purchasing a SCSI cable, be certain that you are selecting a quality cable and that it does not exceed the specified length for SCSI cables. Poor quality external cables or overly lengthy cables may result in poorer performance of your UltraPleX. The maximum cable length should not exceed 1.5 meters.

3) You own a soundboard that has a SCSI interface built into it (e.g., Sound Blaster SCSI II).

First, we recommend against connecting your new UltraPleX drive to the SCSI interface of your sound card. These types of SCSI implementations will limit the performance of this high-performance drive. We do recommend using a separate SCSI interface.

You may need to use the SCSI cable and, most important, an audio cable (see page 34 for a discussion on audio cables). If you have an external drive, you will also need a special bracket connector and an internal SCSI cable. These should have been provided by the soundboard manufacturer. They allow the internal SCSI connector on your soundboard to be linked or connected to your external drive. If they were not provided by your soundboard manufacturer, you will need to purchase them from a local computer supply store.

You may also need to update your device drivers. See the discussion about device drivers in Chapter 9 of this manual.

Once you have assembled everything you need, you're ready to install your drive. But first, a few words of caution are in order.



Precautions

YOUR TASK: Read the list of precautions below.



YOUR OBJECTIVE: Avoid any undo harm coming to you or your drive.

YOUR METHOD: Review the list and use common sense.

Your new CD-ROM drive is a precision electromechanical device. Like the rest of your computer system, it requires reasonable care in its installation and use.

Please read this manual carefully and keep it handy for easy reference. Use this manual for installation, operation, and troubleshooting. See your dealer, or call Plextor's Technical Support Department, should your drive require repair or service.

- ✗ Do not put your computer monitor (or any other device weighing more than 30 lbs.) on top of the UltraPleX external drive.
- ✗ Do not place your drive in direct sunlight, on heating units, or near electrical appliances that draw large amounts of current, such as a high-powered audio amplifier, microwave oven, toaster, hair dryer, etc.
- ✓ Keep the area around your drive clean from dust, smoke, and other contaminants.
- ✓ Use a soft, dust-free cloth for cleaning your drive. Do not allow moisture or liquids such as water, cleaning fluids, or solvents to touch the drive. Thinner, benzene, or alcohol-based solvents can mar your drive's surface.
- ✓ To help ensure that your CD-ROM discs remain free of dirt or other contaminants, they should be stored in a jewel case. Use only an industry standard disc. Do not insert a warped, poorly balanced, or cracked disc or caddy into the drive.
- ✓ Keep your CD-ROM disc clean. See Chapter 10 for tips on handling and cleaning CD-ROM discs.
- ✗ Do not drop or jolt the drive.
- ✗ Do not attempt to open the drive and service it yourself. Removing the cover may expose you to harmful electrical voltages or the laser beam. For your safety, entrust service to Plextor-authorized service personnel only.



Drive Features


YOUR TASK: Get to know your drive.

YOUR OBJECTIVE: Learn how to operate different features of the drive. Learn what goes where. Learn some terms that will be used elsewhere in the manual.

YOUR METHOD: Match the parts of your drive to the diagrams below.

PX-32CS (Caddy) Drive—FRONT PANEL(Int./Ext.)

Door Closed

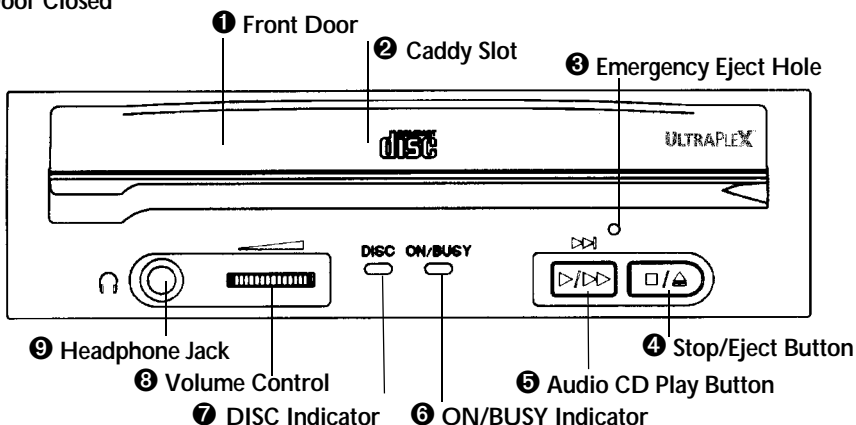

1 Front Door: Press eject button to open and insert disc.

2 Caddy Slot: Insert caddy after opening door.

3 Emergency Eject Hole: Insert paper clip, or other thin, rigid object to eject caddy if automatic eject button **4** does not work. Turn off power before using this feature.


4 Stop/Eject Button: Push to eject. During Audio CD play mode, however, push once to stop audio play and twice to eject.

5 Audio CD Play Button: Push to put drive in Audio CD play mode. Push button once during CD play mode to skip. Push and hold down play button more than one second to fast forward.

6 ON/BUSY Indicator: Yellow when power is turned on. Flashing when disc is inserted and being accessed. Off when disc is inserted and not being accessed.


- ⑦ **DISC Indicator:** Green when power is on and disc is inserted. Off if no disc is inserted.
- ⑧ **Volume Control:** Controls volume of headphone jack. This control has no effect on the rear-panel audio outputs.
- ⑨ **Headphone Jack:** Stereo mini-jack for headphones and powered speakers.

PX-32TS (Tray) Drive—FRONT PANEL (Int./Ext.)

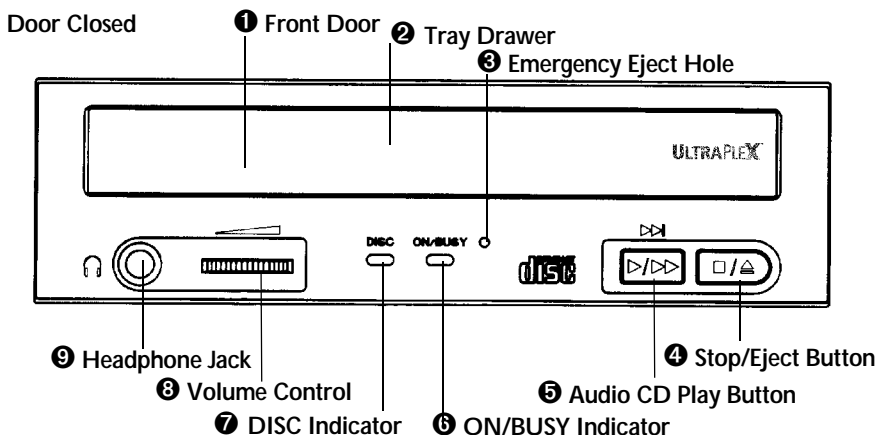

- ① **Front Door:** Press eject button to open and insert disc.
- ② **Tray Drawer:** Insert disc after opening tray drawer. Press eject button to close.
- ③ **Emergency Eject Hole:** Insert paper clip, or other thin, rigid object to eject caddy if automatic eject button ④ does not work. Turn off power before using this feature.
- ④ **Stop/Eject Button:** Push to eject. During Audio CD play mode, however, push once to stop audio play and twice to eject.
- ⑤ **Audio CD Play Button:** Push to put drive in Audio CD play mode. Push button once during CD play mode to skip. Push and hold down play button more than one second to fast forward.
- ⑥ **ON/BUSY Indicator:** Yellow when power is turned on. Flashing when disc is inserted and being accessed. Off when disc is inserted and not being accessed.
- ⑦ **DISC Indicator:** Green when power is on and disc is inserted. Off if no disc is inserted.
- ⑧ **Volume Control:** Controls volume of headphone jack. This control has no effect on the rear-panel audio outputs.
- ⑨ **Headphone Jack:** Stereo mini-jack for headphones and powered speakers.

PX-32XSi Internal Drive (Caddy, Tray)—REAR PANEL

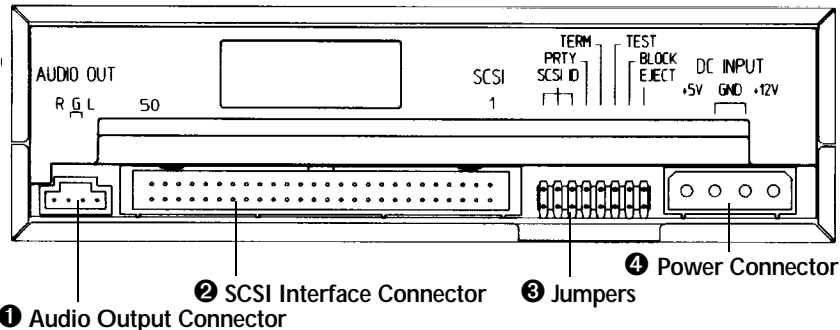

1 Audio Output Connector: Outputs stereo analog signal. Use to connect to sound-board or audio amplifier.

2 SCSI Interface Connector: Connects to SCSI interface board using 50-pin to 50-pin flat ribbon SCSI cable.

3 Jumpers: Use to select SCSI ID number, parity, termination, test, block size, and eject lock options. Leave these jumpers at their factory settings unless one or more of the following situations pertain to you:

SCSI ID Number: If you are using more than one SCSI peripheral, you may have to change your SCSI ID number, see page 16.

Termination: Review Chapter 7 to determine if you need to turn your terminator switch off.




Block Size: If you are working in a UNIX environment and want to boot from your CD-ROM drive, see page 18.

Eject Lock: If you work in an environment where you need to prevent others from easily removing a CD-ROM disc from your drive, see page 18.

4 Power Connector: Connects to your computer's power supply (DC +5V and +12V).

PX-32XSe External Drive (Caddy, Tray)—REAR PANEL

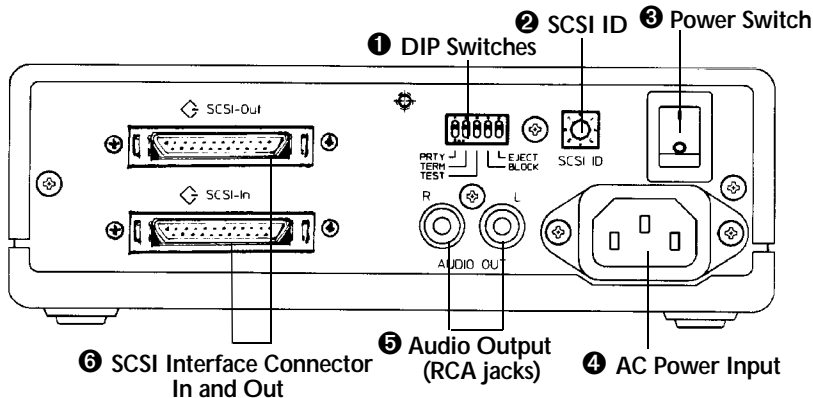

1 DIP Switches: Use to set parity, term, test, block size, and eject lock options. Leave these switches at their factory settings unless one of the following pertain to you:

Termination: Review Chapter 7 to determine if you need to turn your terminator switch off.



Block Size: If you are working in a UNIX environment and want to boot from your CD-ROM drive, see page 18.

Eject Lock: If you work in an environment where you need to prevent others from removing a CD-ROM disc from your drive, see page 18.

2 SCSI ID: Use this dial to designate SCSI ID number. Rotate the dial to change the number. If you are using more than one SCSI peripheral, you may need to change your SCSI ID number (see pages 16 and 17).

3 Power Switch: To turn power ON/OFF.

4 AC Power Input: Use the power cord supplied with your drive.

5 Audio Output: Outputs stereo analog signal via RCA jacks. Use to connect to audio amplifier or other audio equipment.

6 SCSI Interface Connector In and Out: One connector should be used to link your CD-ROM drive to your SCSI host adapter; the other to link your CD-ROM drive to another SCSI peripheral with a daisy chain cable (see page 32). You may use either connector for either purpose.

Drive Switch/ Jumper/Dial Settings



YOUR TASK: Find the location of jumpers (internal drive) or switches and rotary dial (external drive). Check their settings. Change them if necessary.

YOUR OBJECTIVE: To ensure that your new CD-ROM drive can coexist peacefully with other equipment you might have installed in your computer. To ensure that your drive will work properly after it is installed.

YOUR METHOD: Find locations of jumpers/switches/rotary dial on the diagram in Chapter 5. Read below to determine if your drive's settings need to be changed. If so, follow the directions on making the necessary changes.

Your UltraPleX CD-ROM drive needs to be flexible enough to work with the variety of computer systems (PC, Mac, Sun, Silicon Graphics, DEC, etc.) that can use SCSI peripherals. To provide this flexibility, Plextor gives its customers options on how a drive can be set before it is installed. On an internal drive, settings are determined by the position of jumpers on the jumper block at the rear of the drive. On an external drive, settings are determined by the position of DIP switches and the rotary dial on the rear panel of the drive.

Fortunately, we have a pretty good idea of the environment in which most of our drives will be used (a single SCSI device connected to a PC or Mac). Your drive ships from our factory with its jumpers/switches/dial set to work in this environment.

You should leave the jumpers found on the rear panel of the PX-32XSi and the switches and rotary dial found on the rear panel of the PX-32XSe at their factory settings unless: 1) you plan to use another SCSI peripheral (e.g., hard disk, scanner) attached to the same SCSI adapter, in addition to your CD-ROM drive; 2) you work in a UNIX environment and want to boot from your CD-ROM drive; 3) you want to utilize the Eject Lock feature.

If you plan to use additional SCSI peripherals, you may need to change the jumper/switch/dial settings of the UltraPleX. This section will further describe how to make these changes. For more information on #2 and #3, see page 18.




If the CD-ROM drive is the only SCSI peripheral you will use with your computer, you do not need to boot from the CD-ROM drive in a UNIX environment, and if you

do not plan to use the Eject Lock feature, skip now to Chapter 8, Hardware Installation. (Take our word for it, most of you can now skip to Chapter 8.)

PX-32XSi Internal Drive

Factory Setting of Jumper Block

The functions shown are ON if the jumpers are installed and OFF if jumpers are removed. The jumpers are set by the factory as follows:

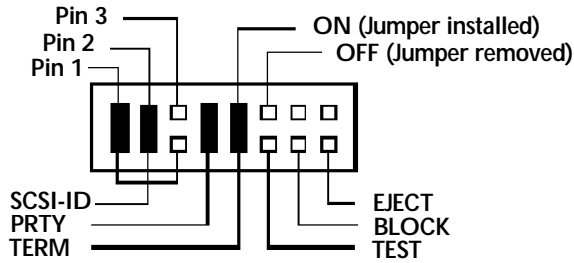


Installing and Removing Jumpers

Ensure power to the drive is OFF before installing or removing jumpers.

To remove a jumper, pull it off with your fingers or a pair of needle-nose pliers.

To add a jumper, push it onto the jumper pins. Three extra jumpers are supplied with the PX-32XSi in addition to the four jumpers already installed at the factory.

Caution: Install jumpers **across** each pin as shown. Do **not** connect one pin switch to another by installing the jumpers lengthwise. Doing so could result in damage to the drive.

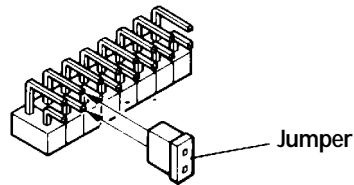

Install Jumpers This Way



Do **NOT** Install Jumpers This Way

SCSI ID Number

It is possible to chain (using a daisy chain cable) up to seven SCSI peripherals to a single SCSI interface board, or to the SCSI port of an Apple computer. When using multiple SCSI peripherals, however, it is necessary to set each peripheral to a unique SCSI ID number.



Your Plextor CD-ROM drive can be set to use one of eight SCSI ID numbers. The drive should arrive with its SCSI ID set to 3. Accordingly, if you already use another SCSI peripheral, and its SCSI ID also is set to 3, you must change the SCSI ID number of either this peripheral or that of the CD-ROM drive. In the past this always had to be done manually. If you connect your UltraPleX to an existing SCSI controller, you will still need to go through this exercise of checking and possibly changing SCSI IDs. If, instead, you bought a Plextor kit with a SCSI interface board, both the drive and the board are SCAM* compliant. Each time you turn on your computer, the drive will internally reset its SCSI ID to avoid any conflict. If you separately purchased or already own a SCSI interface board, it may **not** be SCAM compliant.

Changing the SCSI ID: PX-32XSi

The SCSI ID number of the PX-32XSi is determined by the placement of jumpers on pins 1, 2, and 3. To find the location of pin 1, pin 2, and pin 3, refer to the diagram of the Jumper Block on the previous page. To change the SCSI ID number, follow the chart below.

SCSI ID Number	Jumper Installed Across		
	Pin 1	Pin 2	Pin 3
0	No	No	No
1	YES	No	No
2	No	YES	No
Factory Settings 3	YES	YES	No
4	No	No	YES
5	YES	No	YES
6	No	YES	YES
7	YES	YES	YES

* SCAM stands for SCSI Configured Auto Magically.

For example, the factory setting of the SCSI ID at 3 is made by installing a jumper on pin 1 and pin 2 of the jumper block, leaving pin 3 uncovered. To set the SCSI ID at 7, you would install a jumper across pin 1, another jumper across pin 2, and a third jumper across pin 3. To set the SCSI ID at 5, you would install a jumper across pin 1 and a jumper across pin 3, leaving pin 2 uncovered.

PX-32XSe External Drive


SCSI ID Number

Please see explanation at the top of page 16. It is also applicable to the external drive.

Factory Setting of Dial and DIP Switches

Caution: Turn the drive's power OFF before changing the setting of the dial or DIP switches.

The SCSI ID number of the PX-32XSe is determined by the position of the pointer on the SCSI ID rotary dial. The drive should arrive with its SCSI ID set to 3. The rotary dial and DIP switches are set by the factory as shown below:

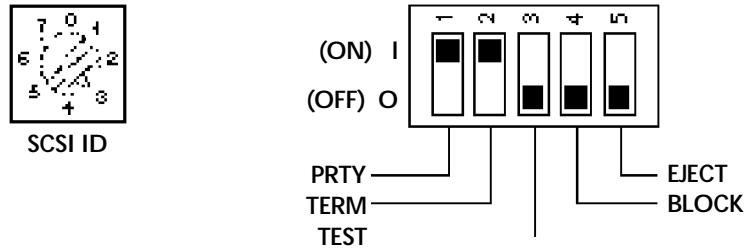

Changing the SCSI ID


Using the blade of a screwdriver, rotate the dial's arrow to a different SCSI ID number.

Changing DIP Switch Settings

Use a screwdriver, pen, or paper clip to push the DIP switches to an OFF or ON setting.

Other Switch/Jumper Settings—UltraPleX

The remaining switches (external drives) and jumpers (internal drives) are:

- Parity** Leave this ON. The parity check provided by the ON setting enhances the reliability of the SCSI bus. Set to OFF only if your computer system or SCSI controller specifically requests that parity be disabled.
- Term** This enables or disables (turns ON or OFF) SCSI termination. Factory setting is Enabled (ON). See page 19 for an explanation of SCSI termination and to determine if you need to change this setting.
- Test** Leave this OFF. It is for factory use only.
- Block** Leave this OFF, unless you are working in a UNIX environment and want to boot from your CD-ROM drive. If so, set this switch/jumper ON. 
- Eject** In most situations, you will want to leave this switch/jumper OFF.

However, if you are in an environment where you want to prevent others from borrowing or stealing the disc inserted in your drive (e.g., the drive is located in a public place where multiple users have unlimited access), you can activate the Eject Lock feature. To do so, set this switch/jumper ON.

When this switch/jumper is ON, it is impossible to eject a disc inserted in the drive by pressing the Eject button. A software eject command must be issued for the disc to eject from the drive. Check your device driver manual for instructions on how to issue a software eject command. The media lock and eject functions can also be controlled by Plextor Manager software.



Termination

YOUR TASK: Find the location of the SCSI termination jumper or switch.

YOUR OBJECTIVE: Determine if you must disable the SCSI termination.

YOUR METHOD: Your drive was shipped with termination enabled. If necessary, remove termination jumper or turn off SCSI termination DIP switch by following instructions below.

You must enable SCSI termination if the UltraPleX is the only SCSI peripheral used with your computer. In addition, you must enable termination if you are using multiple SCSI peripherals with your computer, and the UltraPleX is positioned as the **last** peripheral in a daisy chain. If you are using an Ultra SCSI host adapter we recommend enabling active termination.

If you have internal SCSI peripherals only, or external SCSI peripherals only (but not both), then you should be using an internal ribbon cable or daisy chained external cable (or cables), respectively (but not both). In this case, all devices between the host adapter and the last peripheral on the opposite end of the ribbon cable, or the last peripheral at the end of your daisy chain, should have their termination removed, disabled, or turned off.

If you have both internal and external SCSI peripherals (both the internal and external connectors of your host adapter are used), then the termination of your SCSI host adapter should be removed or disabled. The last peripheral on your internal cable and the last peripheral on your external daisy chain should retain their termination. All other SCSI peripherals connected to the host adapter should have their termination removed, disabled, or turned off.

NOTE: Some host adapters and peripherals have the ability to disable and enable termination *power*. This should not be confused with termination itself. Termination *power* can and should be provided by at least one device attached to your SCSI host adapter. Your Plextor CD-ROM drive automatically supplies termination power. Any additional devices supplying termination power will NOT cause any problems.



Remember: Only the **last** SCSI peripheral in a daisy chain should have termination enabled. If you have any SCSI devices chained **after** your UltraPleX, you must disable or turn OFF the UltraPleX's termination using the following instructions:

PX-32XSi Internal Termination

The PX-32TSi is shipped from the factory with its termination enabled (ON).

To disable termination, remove the jumper from the termination pins on the back panel of your drive. Refer to the diagrams on pages 12 and 15 for the location of the termination pins (labeled "Term"). They are the fifth set of pins from the left.

If your drive already is installed in your computer, be sure to turn off your computer power before removing (or reinstalling) the jumpers. We recommend that you retain the jumpers so you can reinsert them onto the termination pins if you later need to turn the drive's termination ON.

PX-32XSe External Termination

The PX-32TSe is shipped from the factory with its termination turned ON.

To turn the termination OFF, first turn off the drive's power, then change the second DIP switch on the rear panel of the drive to the OFF position. Refer to the pictures on pages 13 and 17 for the location of the termination switch (labeled "Term"). It is the second of the five switches.